Alto II Mobile Phone

User Manual



Forewords

Copyright© 2011 Gold GMT SA All Rights Reserved

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission as Gold GMT SA.

Statement

Pictures contained in the present manual can vary from the enclosed mobile phone. Please refer to the enclosed mobile phone as the product. Gold GMT reserves the right to revise this document or withdraw it at any time without prior notice.



Content

Section	Page
 General information 	4
Preparation	7
• Startup	12
 Call section 	14
 Contacts section 	20
 Messages section 	26
 Settings section 	31
 Alarms section 	39
 Safety precautions 	48

This manual provides detailed step-by-step procedures for proper use of your Alto II mobile phone.

- Prepare the Alto II mobile phone according to the instructions found from page 7.
- Let the device make a full battery charging before first use (at least 1h).
- Switch-on your Alto II mobile phone and follow the startup procedure on page 12.
- Refer to the manual descriptions for any operation.



General Information

The Alto II mobile phone is a simple, convenient and robust solution for communication. It has been designed to compensate several sensory and cognitive troubles:

- Simplified menus
- Improved readability
- Voice Guide (with SMS reading)
- Audio up to 60dB
- Improved autonomy
- Emergency calls





Accessories













Altoll parts description

Parts designation: Speaker Mute Key: Screen **Voice Guide** Ear-set **ON/OFF** connector + Key: Louder CALL **STOP** - Key: **USB** cable Key Key Quieter connector (Gold_{GMT} (remove cap) END Menu Keys 3₽ Keyboard 6™N 5 NK 9WX 88 Bump keys for touch Microphone typing (blind or sign disabled people): Keys 5,* and #



Preparation

Remove the back panel of your Alto II, and insert the SIM card:









Preparation

Insert the battery and replace the back panel:









Insert the handset in the cradle, connect the adapter cable and the AC plug:











N.B: You must let your Alto II in the cradle during 1h at least for the first charging.




Voice-guide

Once your mobile phone is switched-on, the voice-guide starts to speak to deliver information about proper usage:

Alto

"Welcome to the mobile phone Alto. This phone is speaking and will provide help and advice along it's use.... You can mute or tune the volume using the following right-side keys.

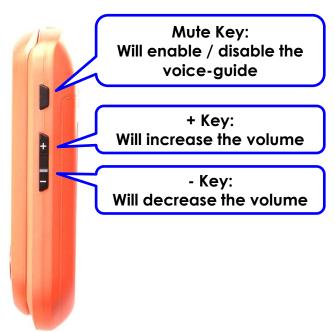

Aside of advice, the voice-guide will read the content of your SMS to improve the accessibility.




Display

Once your mobile phone is switched on and waiting for use, the main screen is the following:



You can access the main menu by pressing the OK key. Then, the main menu is displayed as a list that you can navigate with up/down keys, and select the item by pressing the OK key.

How to read your screen:

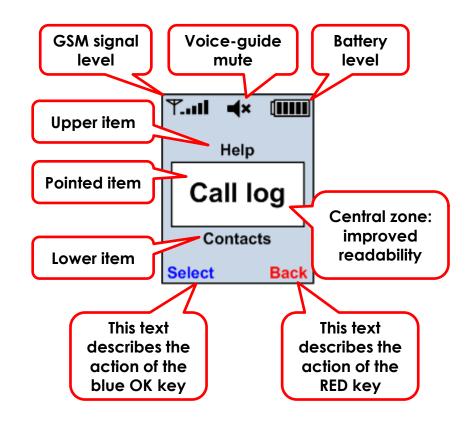



Important notifications

Special events are notified with specific background colors:

Battery is too low



Phone needs urgent charging, you have to place phone in the cradle

You have generated the SOS alarm call



Wait your phone to connect SOS number. Cancel the alarm by pressing the RED key

Reminder is notified



Press the RED key to escape from reminder

People is calling



Press the green key to answer or the red key toreject the call.

New message received




Press the blue key to read the messages



Startup

After pressing the RED key for more than 3 seconds, step through the illustrated steps. The PIN code has only to be inactivated the first time the SIM card is used.

If the operator is smart enough to provide date and time the related steps are automatically skipped.

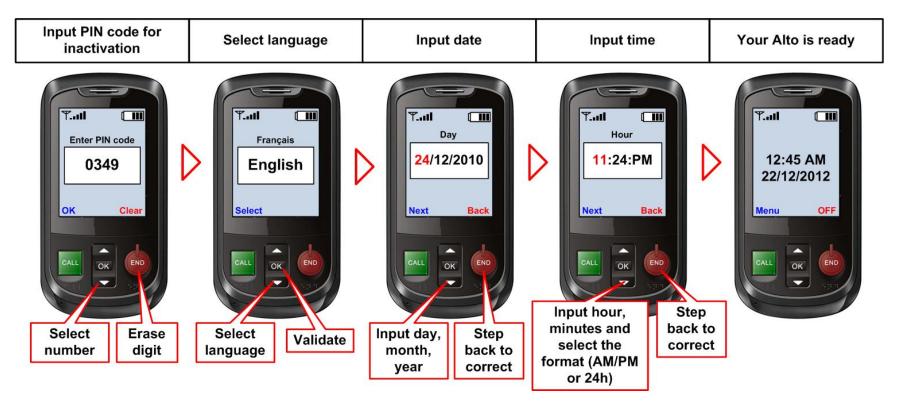



Main menu and sections

The main menu is accessed by pressing the OK key. The different sections can be covered using the up and down keys:





Call Section

Calls management covers:

- Selecting a contact to call
- Input a number to call

14

- Starting an emergency call
- Enter the call log and access to received and sent calls.

 
These operations are explained and detailed step-by-step in the present section.

Call log section



People is calling







Call a contact


Call to a contact in your list:





Call a number

Call to a number:

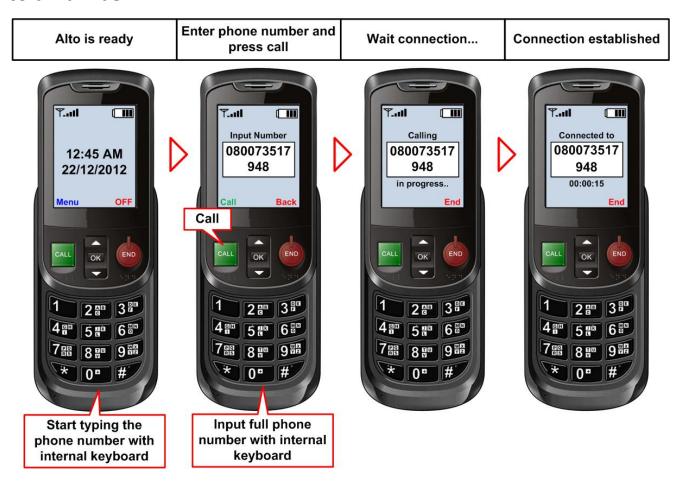



Emergency call

Emergency call to SOS numbers:

To generate an SOS alarm call, press any key **except RED key** for more than 5 seconds. RED key can be used to cancel the operation.



SOS numbers are selected among the contacts (see the settings section). They are chain-called until success. If no SOS contacts are selected, SOS call is disabled.





Options during a call

During call, you can tune the volume:



During call, you can generate DTMF tones to make selections operations:




Internal keyboard can alternately be used for such purpose.



Call log

Access to call log through the main menu:

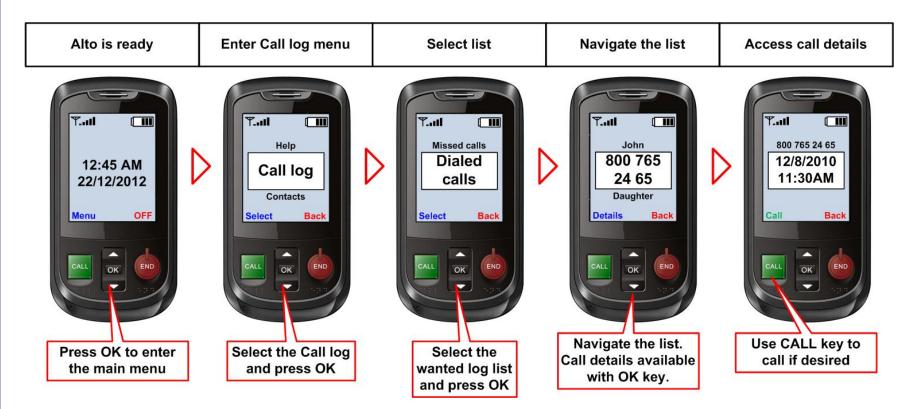



Contacts section

Manage the contacts list present in your Alto II requires the following actions:

- Add a contact
- Delete a contact
- Modify a contact

These operations are explained and detailed step-by-step in the present section.

Contacts section





Add a contact

To add a new contact (part 1 of 2):





Add a contact

To add a new contact (part 2 of 2):





Delete a contact

To delete a contact:





Modify a contact

To edit (modify) a contact (part 1 of 2):





Modify a contact

To edit (modify) a contact (part 2 of 2):





Messages section

The operations allowed to handle text messages are the following:

- Write and send a message
- Read incoming messages
- Read outgoing messages

These operations are explained and detailed step-by-step in the present section.

N.B: Alto II does not allow to send MMS (multi-media messages), but only to receive them. The options to write the message content are limited to enhance the accessibility by disabled people.

Messages section





Write and send a message

Compose a new message and send it:





Write and send a message

Compose a new message and send it:

Input the text of the Select send in the options message T.ul T.ull Write message Abort Dear son, would Send you like to join us for the lunch Option Select **Erase** Back 2 0 3 0 3 🖫 The message is read Type the text of the by the voice-guide. message using the To send the internal keyboard. message, select When finished, send and press OK select the options by pressing the OK key

During message writing, different input modes are accessible by using the # key:

- 1. Dictionary / Upper-case (default)
- 2. Dictionary / Lower-case
- 3. Multikey / Uper-case
- 4. Multi-key / Lower-case
- 5. Numbers


Further clicking key # goes back to the first option.

There is no display of current input mode in order to keep the display understandable by cognition disabled people.



Read incoming messages


Navigate in the list of received messages, select and read a message. Optionally delete the message.

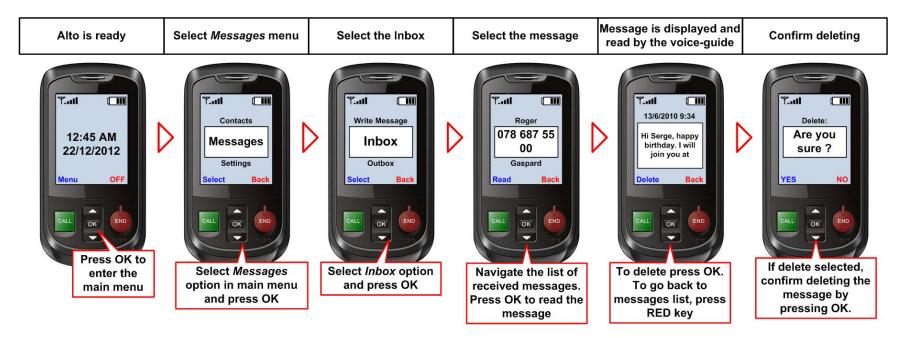



Read outgoing messages

Navigate in the list of sent messages, select and read a message. Optionally delete the message:

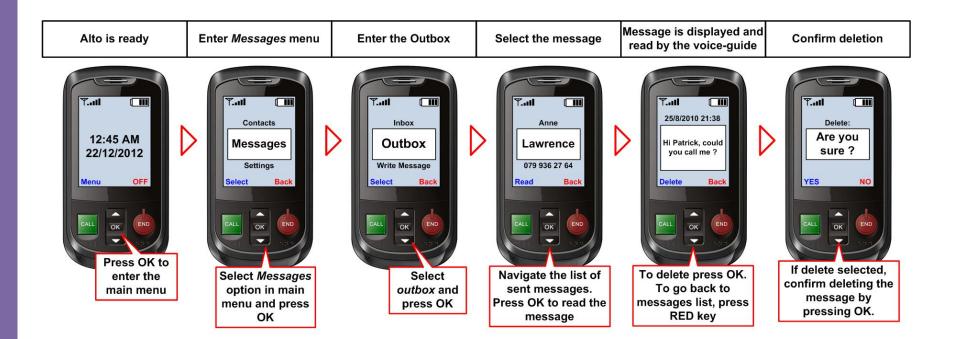



Settings section

The settings provide the user with a high degree of configurability to enhance the experience with your Alto II mobile phone. Possible settings are:

- Setup time and date
- Tune the screen brightness
- Select the voice-guide gender
- Select the language
- Set-up the emergency numbers

These operations are explained and detailed step-by-step in the present section.


Settings section





Setup the date

Enter the settings section and change the date:

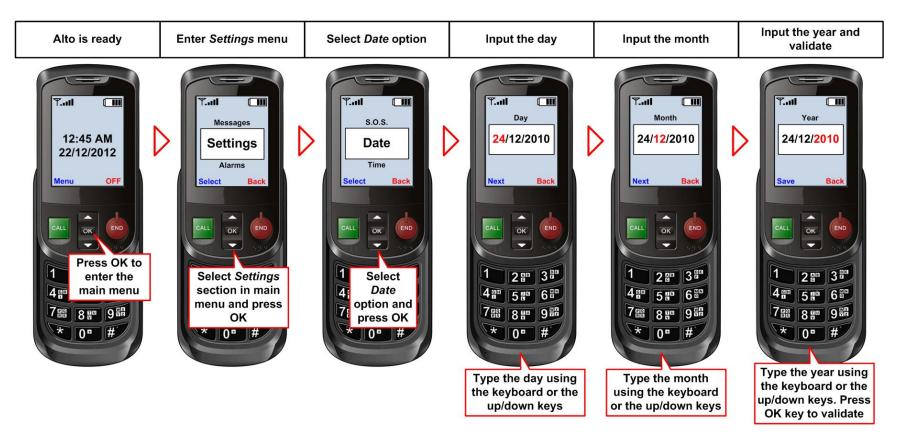



Setup the time


Enter the settings section and change the time:





Tune the screen brightness


Enter the settings section and tune screen brightness:

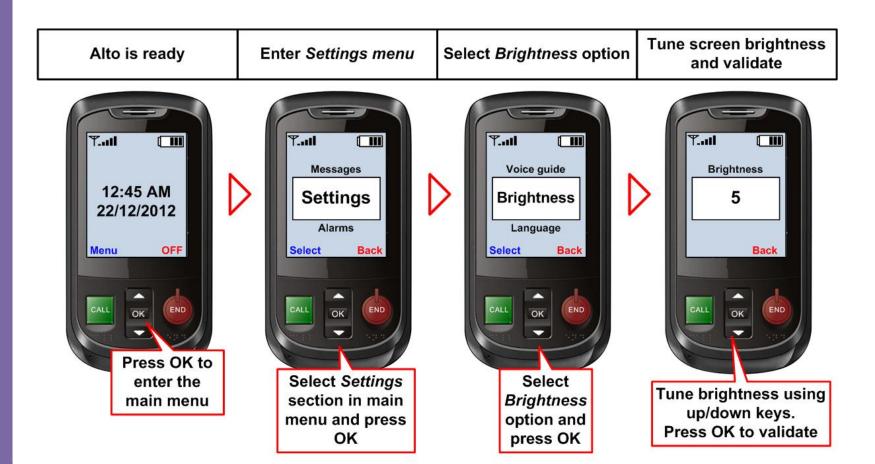



Select the voice-guide gender


Enter the settings section and select the voice-guide gender:

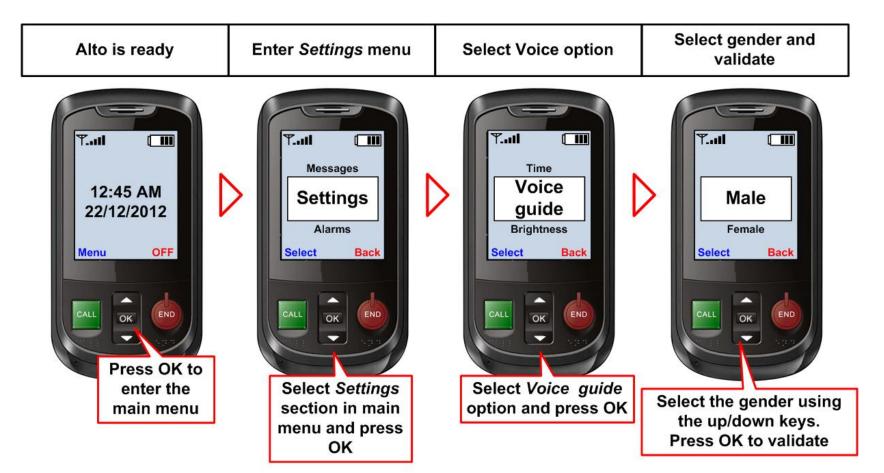



Select the language


Enter the settings section and select the language:

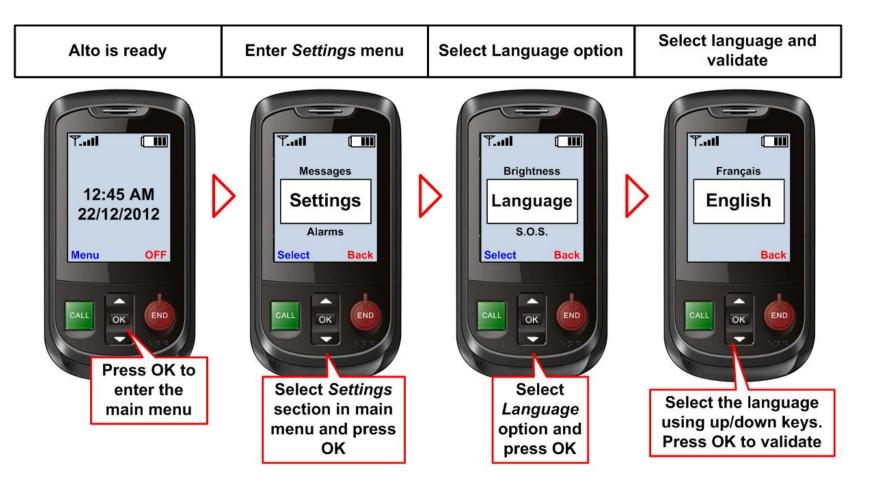



Set-up the emergency numbers


Enter the settings section and configure the SOS numbers (1/2):

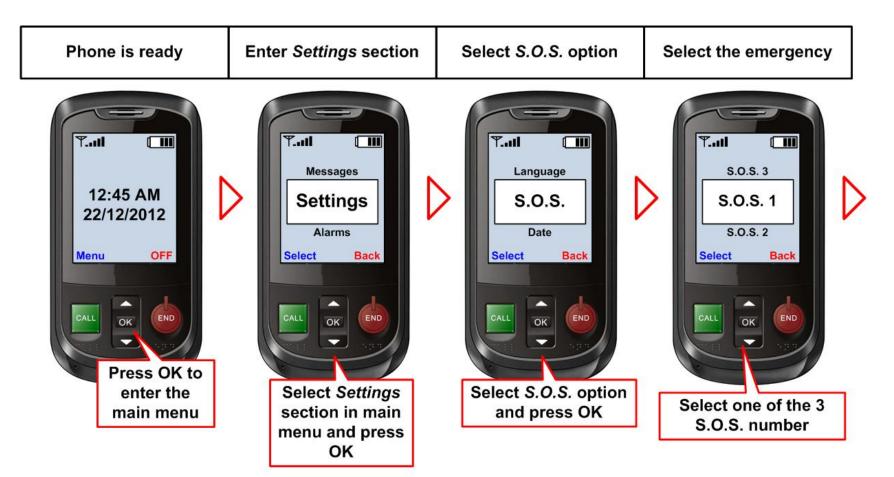



Set-up the emergency numbers

Enter the settings section and configure the SOS numbers (2/2):

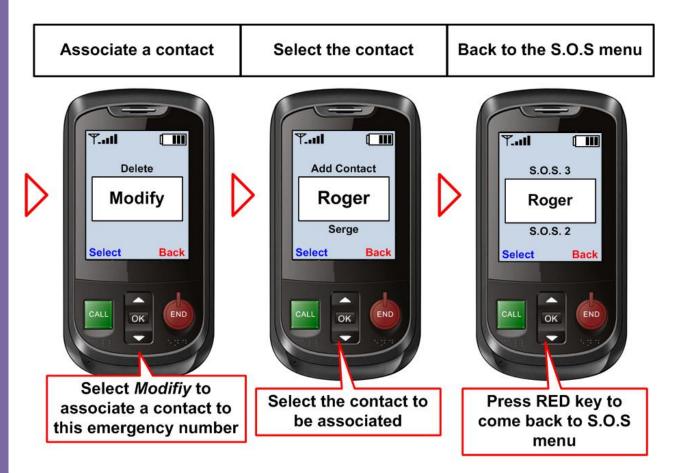



Alarms section

Alarms can be configured to remind important things with various schedules.

- Daily events like medicine
- Weekly event like exercise
- Monthly events like visits
- Yearly events like anniversaries
- Single events (once) like weddings

Alarm configuration is harder a task than simply having a call. To improve understanding of the alarm configuration, we have illustrated two complete examples in the following sections.

Reminder is notified




Alarm event reminder



Set a yearly alarm

Configure an alarm for an anniversary (1/3):

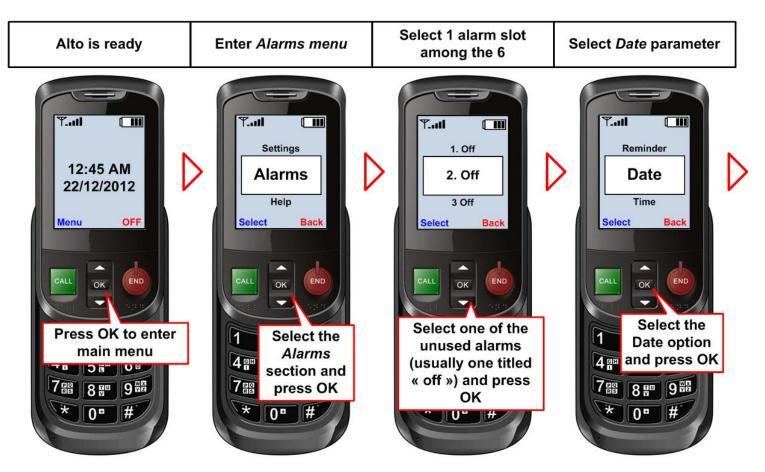



Set a yearly alarm

Configure an alarm for an anniversary (2/3):





Set a yearly alarm

Configure an alarm for an anniversary (3/3):





Set a daily alarm

Configuration of an alarm for the daily taking of a medicine (1/3):





Set a daily alarm

Configuration of an alarm for the daily taking of a medicine (2/3):





Set a daily alarm

Configuration of an alarm for the daily taking of a medicine (3/3):





Disable an alarm

Disable an alarm (1/2):





Disable an alarm

Disable an alarm (2/2):





Safety precautions

Please read these simple guidelines. Not following them may be dangerous or illegal.

Do not switch the phone on when Mobile Phone use is prohibited or when it may cause interference or danger.

Do not place your phone and its accessories in containers with strong electromagnetic field.

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Do not use the phone at a refueling point. Do not use near fuel or chemicals.

Follow any restrictions. Wireless devices can cause interference in aircraft.

Keep the phone and all its parts, including accessories, out of the reach of small children.

Use only approved batteries and chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.

Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.



Enjoy your Alto II mobile phone!

GoldGMT CH-2002 Neuchâtel, Switzerland

